CODE
INTERIORS

INSTALLATION GUIDE / MAINS PRESSURE

Nature Shower Column

INSTALLATION REQUIREMENTS

CODE INTERIORS

IMPORTANT

To ensure your warranty remains valid and to avoid any potential issues, please follow the installation instructions in this manual carefully. This will help us honour our commitment to your satisfaction and protect your investment in our product. Damage caused by excessive pressure, debris in pipework, and chemical cleaners is not covered


⚠ Failure to comply with this guide may void warranties.

SYSTEM REQUIREMENTS

- Installation must be carried out by a licensed plumber and comply with AS/NZS 3500 Plumbing & Drainage Standards.
- Maximum inlet pressure is 500kPa. (A pressure-limiting valve must be installed where pressure exceeds 500kPa.) A tempering valve is mandatory for all installations supplying mixed water to bathrooms in New Zealand & Australia.
- Flush all pipework prior to installation to prevent debris damaging the mixer and diverter.

COMPONENTS INCLUDED

1. 1/2" inlet connector
2. Finishing ring (decorative cover)
3. M5 grub screw
4. Column/rail
5. Top mounting bracket
6. Finishing ring (decorative cover)
7. Top mounting leg
8. 1.5m Shower hose
9. Hand shower (supplied separately)
10. Rain head (supplied separately)

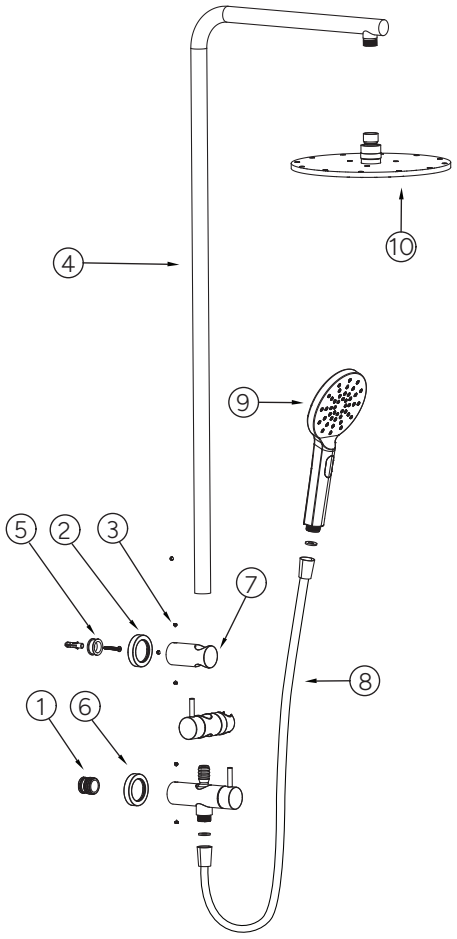

HOW TO INSTALL


CODE INTERIORS

PRE-FIXING REQUIREMENTS

- Water Inlet: 1/2" BSP male thread. The water inlet is through the bottom fixing bracket. Recommended installation height, 1250mm - 1400mm from finished shower floor.
- Nogging in place for fixing top bracket (column fixing ranges between 500 to 840mm). It's not recommended to fit this rail into GIB alone without timber nogging.
- Pre-Install Pipe Flush: Ensure all pipework has been fully flushed before installation to ensure no debris blocks the flow restrictors.


1 POSITION & INSTALL THE COLUMN

- Measure from the bottom water inlet up to the desired position for top mounting bracket.
- Drill a hole and install the top mounting bracket to the wall, ensure the top bracket is tightened to the rail via the leg mounting spindle.
- Install the column as shown in the diagram.

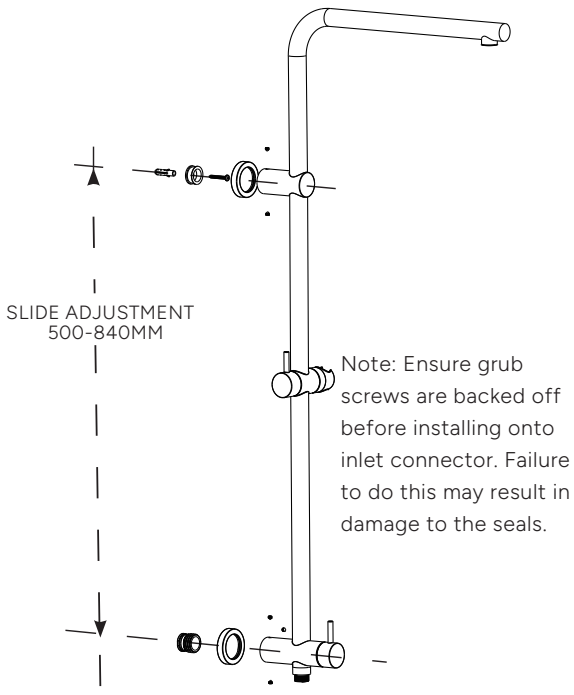

2 FIT THE SHOWER COMPONENTS

- Connect the shower hose to the bottom of the column and install the shower hand piece.
- Attach the rain head.
- Ensure all seals are fitted correctly and connections are hand-tight (do not over-tighten).

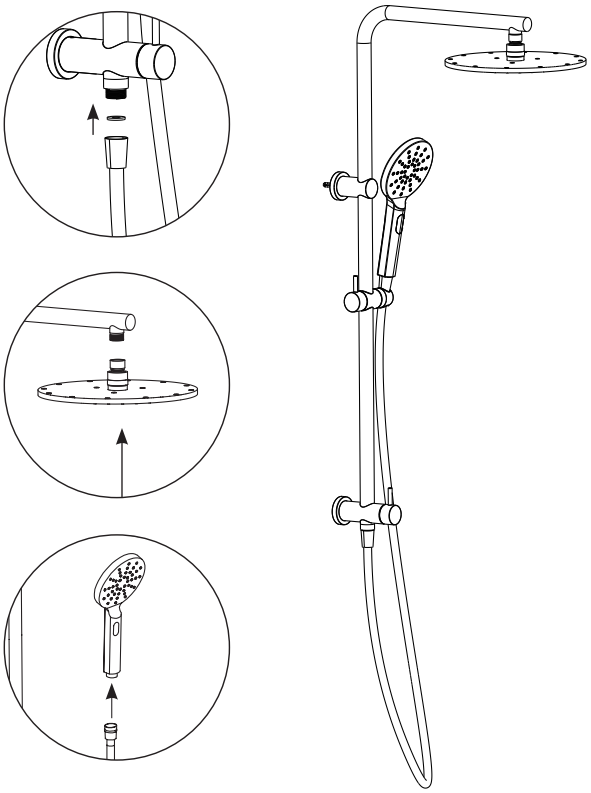

POST-INSTALLATION CHECKS

- Turn water on and check all connections for leaks.
- Test diverter operation.
- Verify hot water temperature at outlet complies with Maximum 50°C. Adjust tempering valve if required.

MAINTENANCE & CARE

CODE INTERIORS

IMPORTANT

To ensure your warranty remains valid and to avoid any potential issues, please follow the installation instructions in this manual carefully. This will help us honour our commitment to your satisfaction and protect your investment in our product. Damage caused by excessive pressure, debris in pipework, and chemical cleaners is not covered.

- Clean column surfaces with mild soapy water only.
- Do not use abrasive cleaners, acids or solvents.
- Periodically inspect hose connections and wall fixings.

⚠ DO NOT clean product surfaces with cleaning agents that contain a corrosive acid or a scouring additive. Plated surfaces should be cleaned with mild soapy water only. Any damage caused through the use of an unsuitable cleaner will not be covered by warranty.