CODE
INTERIORS

INSTALLATION GUIDE / MAINS PRESSURE

Nature Slide Shower

codeinteriors.co.nz

INSTALLATION REQUIREMENTS

CODE INTERIORS

IMPORTANT

To ensure your warranty remains valid and to avoid any potential issues, please follow the installation instructions in this manual carefully. This will help us honour our commitment to your satisfaction and protect your investment in our product. Damage caused by excessive pressure, debris in pipework, and chemical cleaners is not covered


⚠ Failure to comply with this guide may void warranties.

SYSTEM REQUIREMENTS

- Installation must be carried out by a licensed plumber and comply with AS/NZS 3500 Plumbing & Drainage Standards.
- Maximum inlet pressure is 500kPa. (A pressure-limiting valve must be installed where pressure exceeds 500kPa.) A tempering valve is mandatory for all installations supplying mixed water to bathrooms in New Zealand & Australia.
- Flush all pipework prior to installation to prevent debris damaging the mixer and diverter.

COMPONENTS INCLUDED

1. Wall plug x 2
2. Fixed feet x 2
3. M5 Grub crew x 4
4. Self tapping screw x 2 (fixing wall brackets)
5. Fixed screws x 2
6. Fixed wall brackets x 2
7. Shower rail x 1
8. Wall elbow (inlet connector) x 1
9. Hand shower piece (supplied separately)
10. 1.5m hand-held shower hose x1

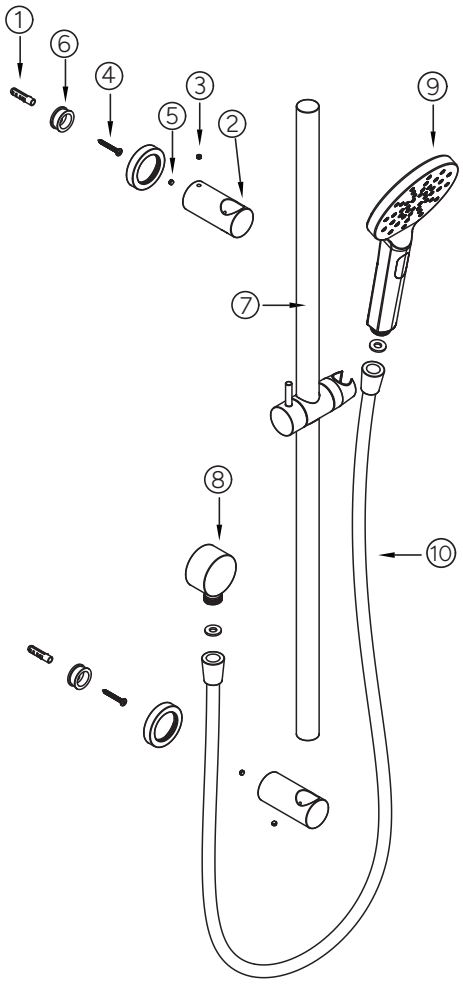

HOW TO INSTALL


CODE INTERIORS

PRE-FIXING REQUIREMENTS

- Water Inlet: 1/2" BSP male thread for wall elbow fixing
- Nogging in place for fixing top and bottom brackets (shower rail fixing ranges between 600 to 800mm).
- It's not recommended to fit this rail into GIB alone without timber nogging.
- Pre-Install Pipe Flush: ensure all pipework has been fully flushed before installation to ensure no debris blocks the flow restrictors.


1 POSITION & INSTALL THE SHOWER RAIL

- Measure and mark out the top and bottom mounting points to fix the mounting brackets.
- Drill holes and fix the brackets in place. Push the slide rail onto the brackets and tighten the grub screws into the groove of each bracket. Do not over-tighten.

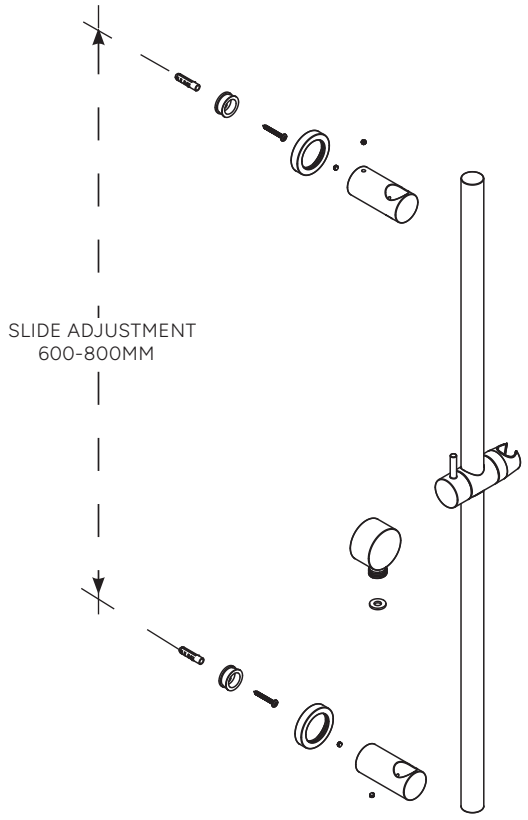

2 FIT & CONNECT THE WALL ELBOW

- Apply thread sealant tape to the male threaded wall fitting, and screw the wall elbow in place.
- Connect the shower hose to the wall elbow and install the shower hand piece.
- Ensure all seals are fitted correctly and connections are hand-tight plus final secure tighten (do not over-tighten).

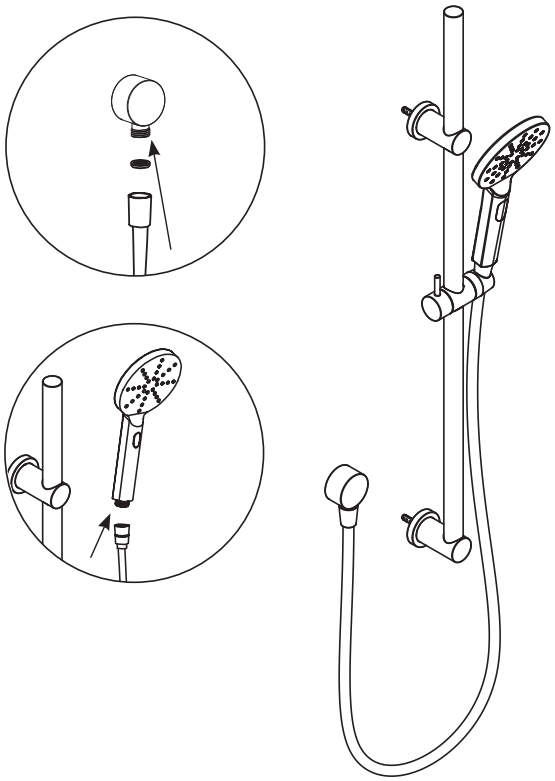

POST-INSTALLATION CHECKS

- Turn water on and check all connections for leaks.
- Verify hot water temperature at outlet complies with Maximum 50°C. Adjust tempering valve if required.

MAINTENANCE & CARE

CODE INTERIORS

IMPORTANT

To ensure your warranty remains valid and to avoid any potential issues, please follow the installation instructions in this manual carefully. This will help us honour our commitment to your satisfaction and protect your investment in our product. Damage caused by excessive pressure, debris in pipework, and chemical cleaners is not covered.

- Clean column surfaces with mild soapy water only.
- Do not use abrasive cleaners, acids or solvents.
- Periodically inspect hose connections and wall fixings.

⚠ DO NOT clean product surfaces with cleaning agents that contain a corrosive acid or a scouring additive. Plated surfaces should be cleaned with mild soapy water only. Any damage caused through the use of an unsuitable cleaner will not be covered by warranty.