

PLUMBLINE

Installation Instructions

TOP FIX BASIN WASTE




IMPORTANT!

Please read these instructions
prior to installation




1

Firstly, remove the waste cap and mechanism.

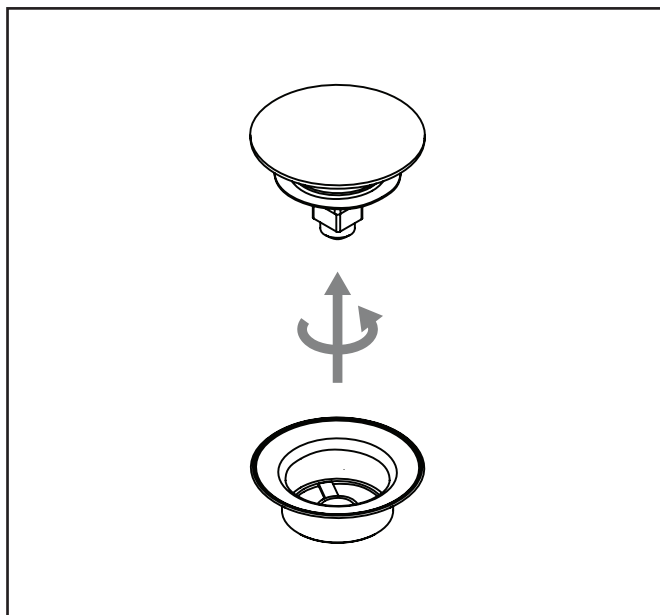


2

Using the centre draw bolt, fasten the waste into place

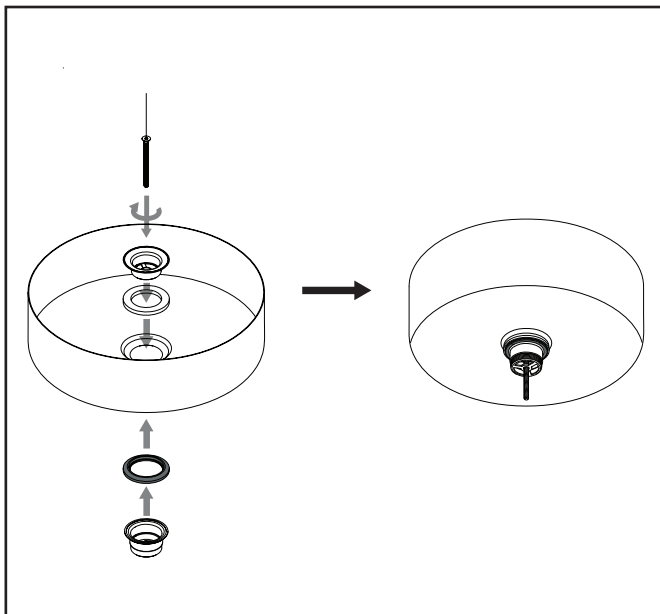

3

Screw the waste cap and mechanism down into place.

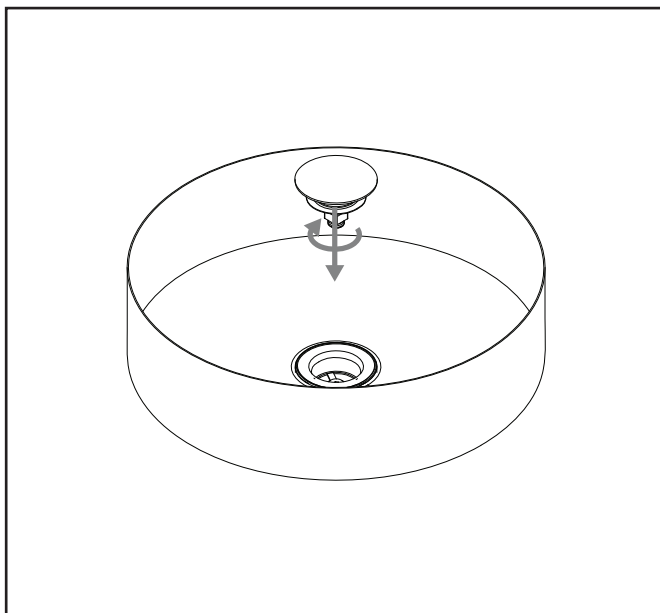

4

Finally, connect the waste to the waste trap and test for performance and ensure that there are no leaks.

