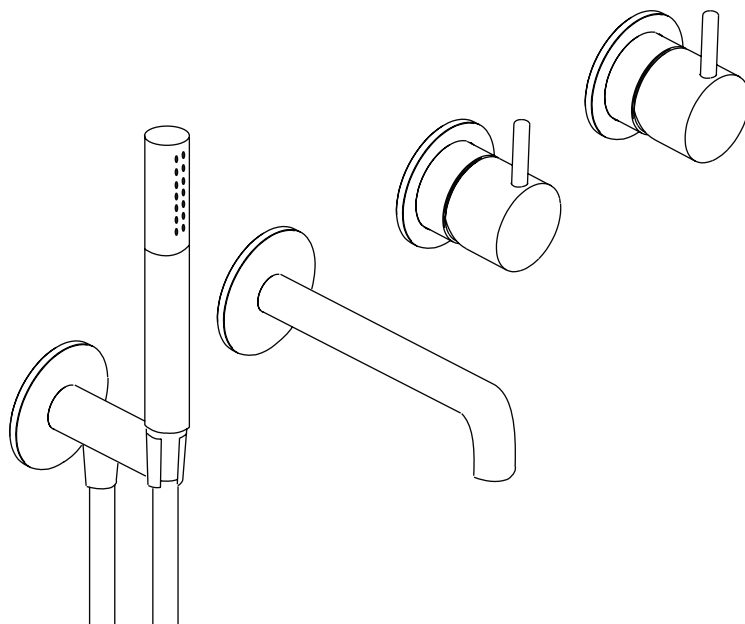


Installation Instructions

BUDDY WALL MOUNT BATH/SHOWER SET

CB030


**IMPORTANT!**

Please read these instructions
prior to installation



Recommendations for Installation

**ATTENTION!**


Failure to follow these recommendations may void the warranty.
It is recommended that a qualified, licensed tradesperson install this product.

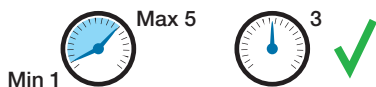**Water Pressure: 3 Bar**

Product performance cannot be guaranteed if pressure is less than 1 bar. Above 5 bar a pressure regulator must be installed. Failure to do so voids the product warranty.

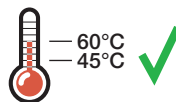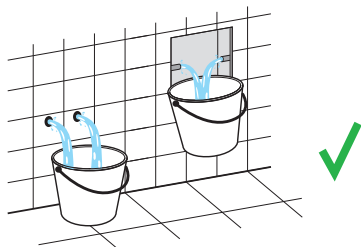**Water Temperature: 45°- 60°C****Pre-flush**

Always flush out the pipework before connecting any tapware. Failure to do so voids the product warranty.

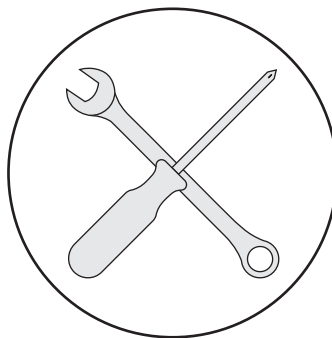
**Warranty Information**

Clean with warm soapy water and a smooth cloth. Avoid abrasive sponges or detergents as these will damage the finish.

Installation Instructions

1

Ensure there is framing in the wall to fasten the internals and wingbacks to.

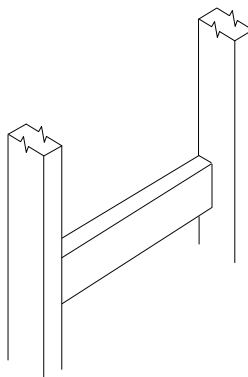


2

Fix the internals and wingbacks into place and run the piping between them. We recommend to run the piping as shown in the diagram.

Important Notes:


- Prior to wall lining, all fittings must be checked for leaks.
- Charge the system with mains pressure and plug both of the wingbacks.
- Open the valve and test for leaks while adjusting the diverter to both positions.
- Mains pressure only, max 800 KPA hydrostatic test, do not hydrostatic test the with the mixer open.

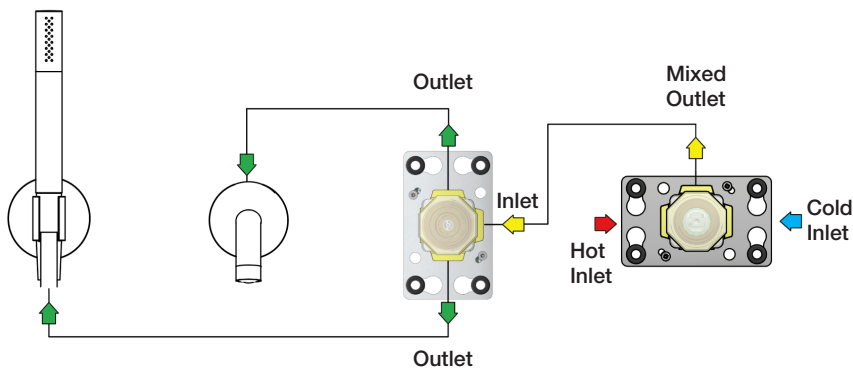

Installation Instructions

3

Once the wall has been lined, remove the protective boxes from the mixer and diverter, then fit them with the externals.

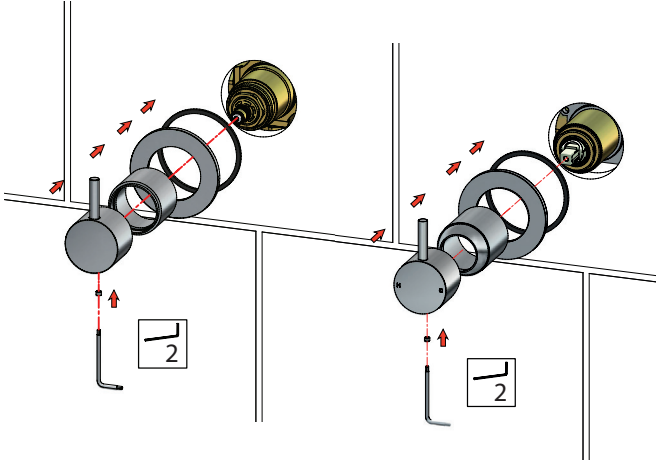

4

Apply thread sealant to the inlet threads and then fit off the spout and the wall mount shower.

