

INSTALLATION INSTRUCTIONS


TOP FIX BATH WASTE

progetto

1


Firstly, set the bath waste trap in position, then connect in the the underside collector of the waste and sit the seal in place.

Note - if the waste has an overflow outlet that is not being used, this must be capped off.

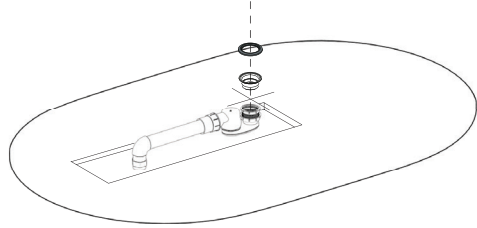

2

Place the bath down ensuring the waste hole aligns with the waste and that the seal will seat correctly on the underside of the bath.

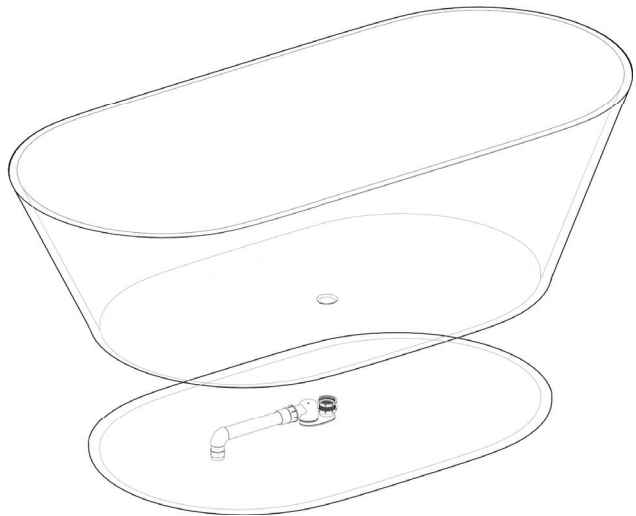

Distributed by:


Plumblīne

T 04 568 9898 E sales@plumblīne.co.nz
www.plumblīne.co.nz

TOP FIX BATH WASTE

3

Once the bath is in the desired position, place the seal and the top half of the waste down into the waste hole, then fasten it into place with the centre draw bolt.

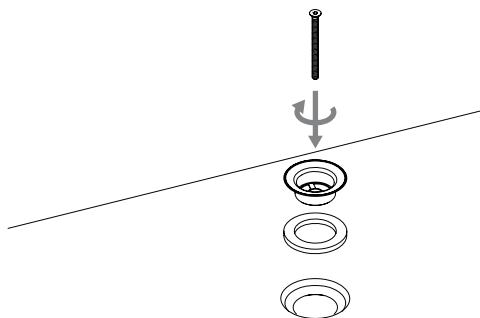

4

Screw the waste cap down, then test the waste for performance and ensure that there are no leaks under the bath.

